

REVELATION
by UTTERMOST
ASSEMBLY INSTRUCTIONS

Illustration

STYLE NO. : R21352

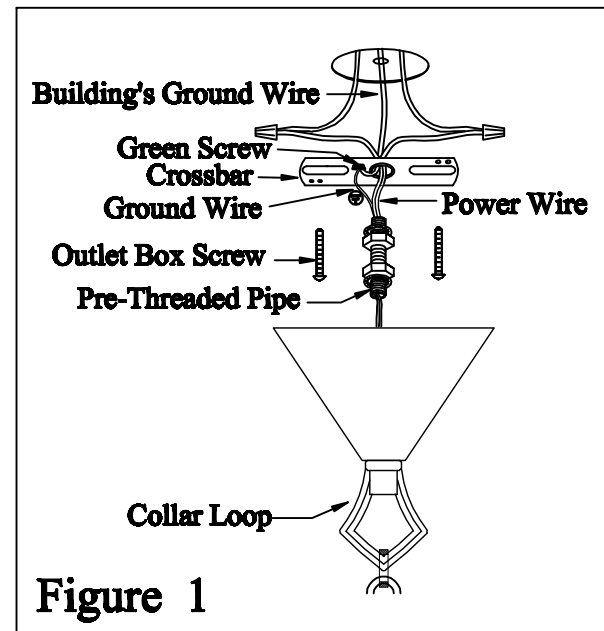


Figure 1


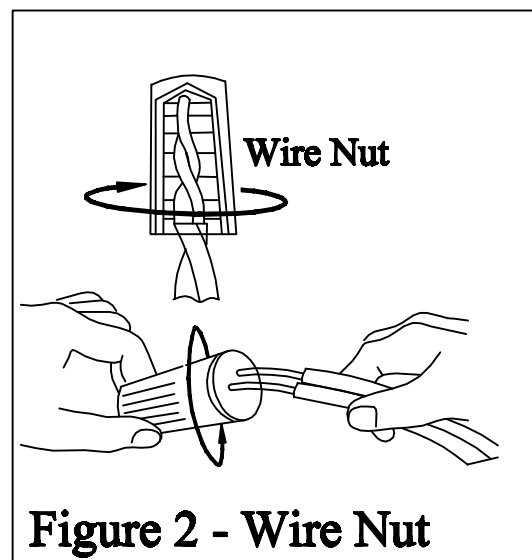


Figure 2 - Wire Nut

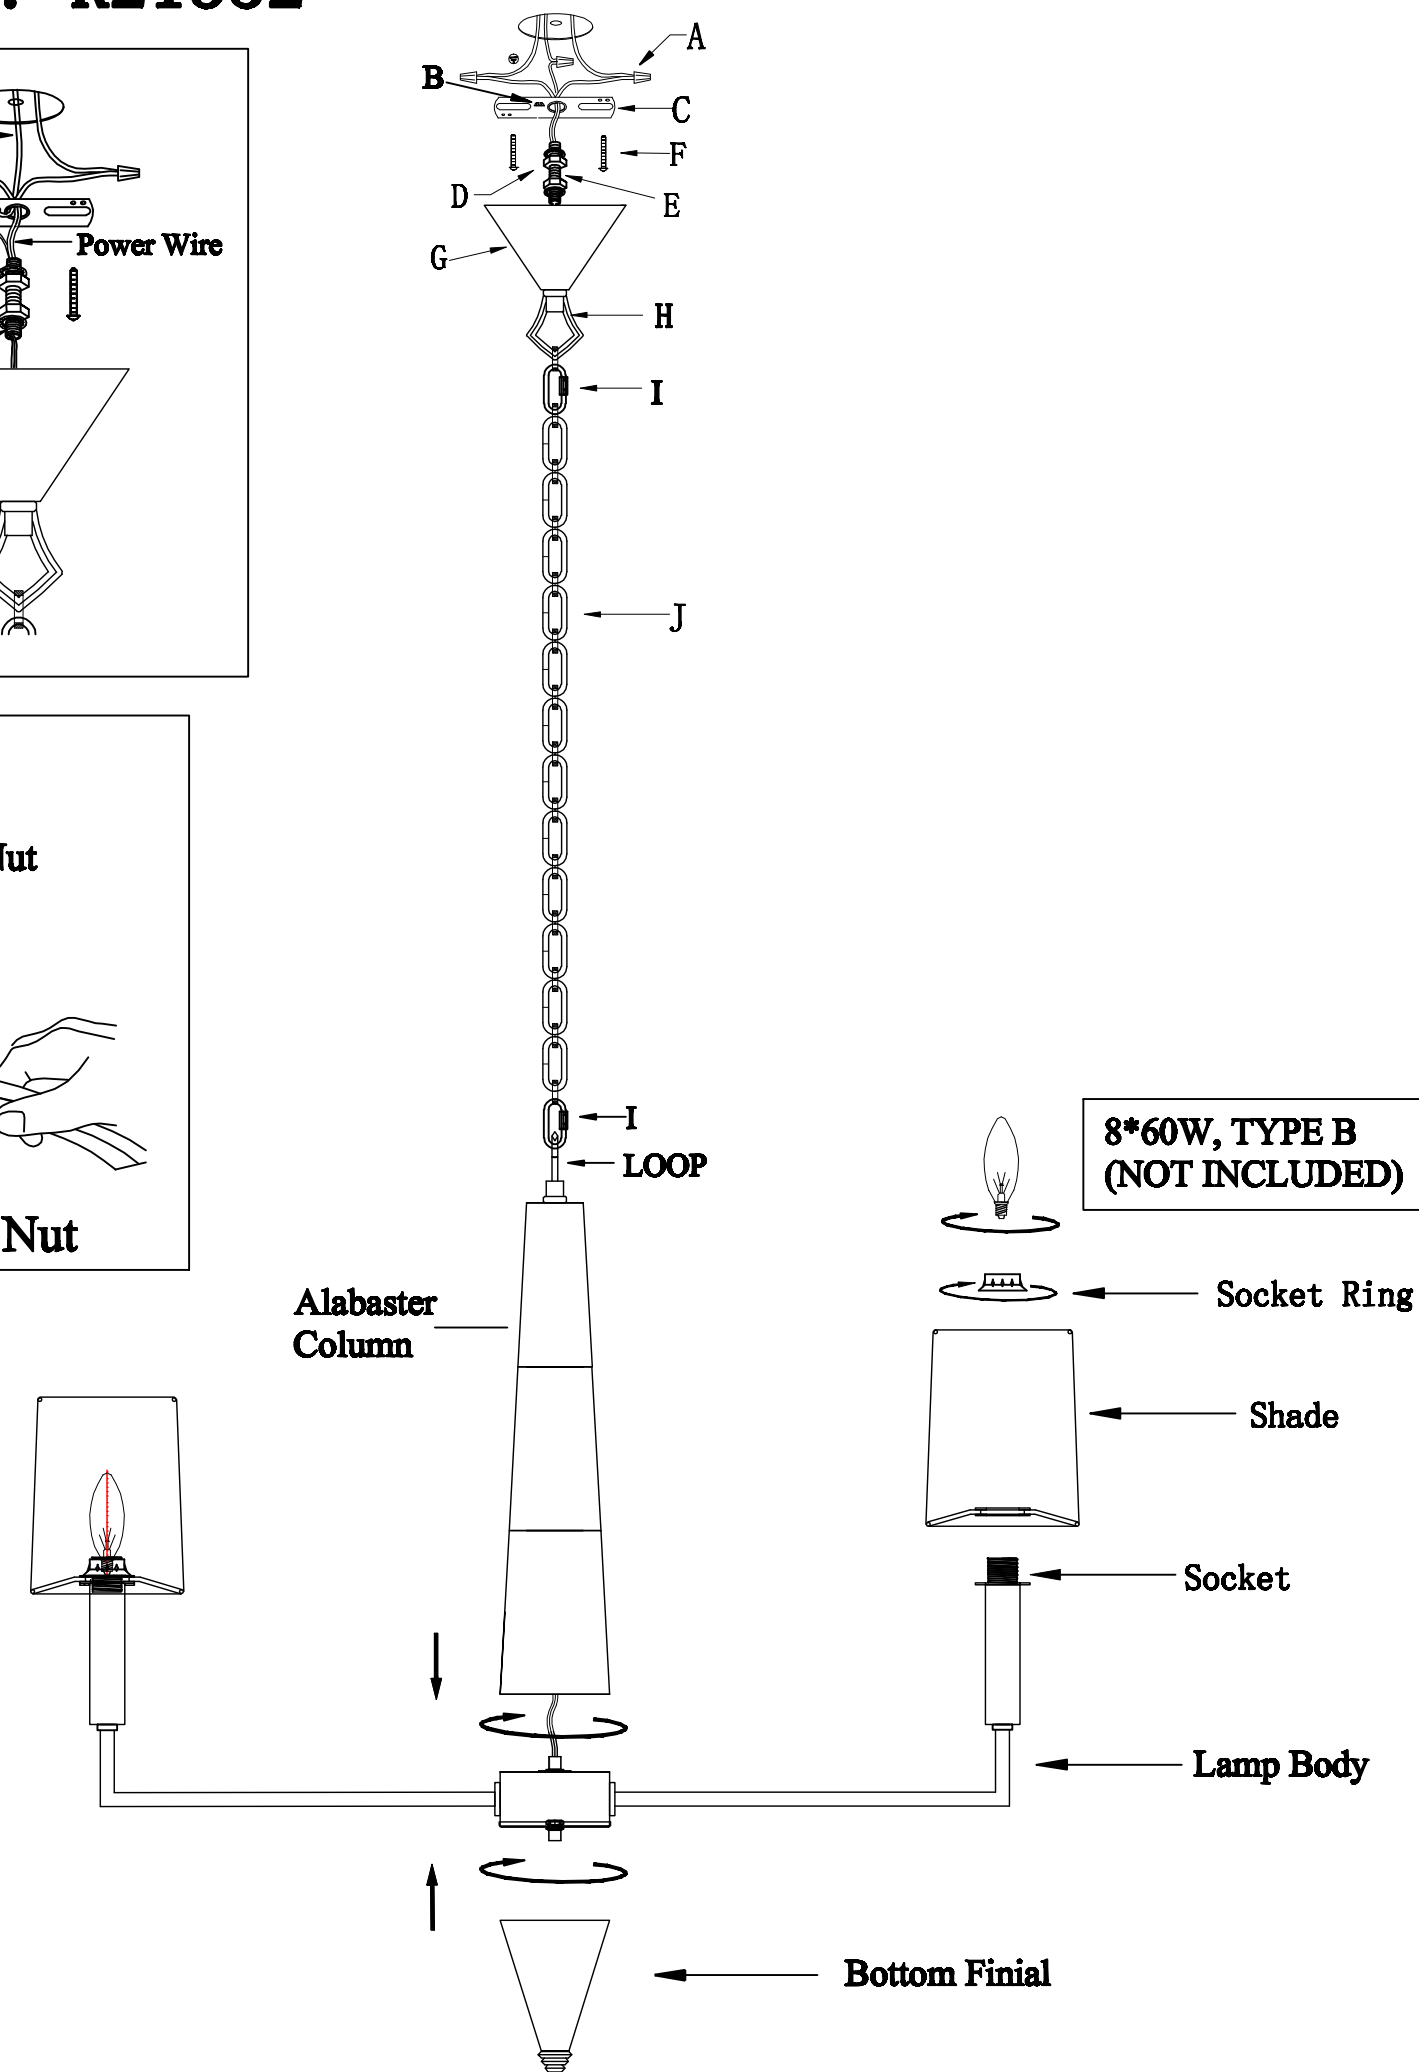

REVELATION
by UTTERMOST
ASSEMBLY INSTRUCTIONS

STYLE NO. : R21352

Parts and Hardware List

| | | |
|----|--------------------|------|
| A. | Wire Nut | 3PCS |
| B. | Green Ground Screw | 1PC |
| C. | Crossbar | 1PC |
| D. | Hex Nut | 2PCS |
| E. | Pre-Threaded Pipe | 1PC |
| F. | Outlet Box Screw | 2PCS |
| G. | Canopy | 1PC |
| H. | Collar Loop | 1PC |
| I. | Quick Link | 2PCS |
| J. | Chain | 1PC |

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Please make sure that you have all the parts indicated before you begin assembling this item. Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

Assembly Instruction

- Carefully remove the parts and hardware from the carton.
- Attach the Alabaster column onto the Lamp Body and secure by turning in a clockwise direction.
- Attach the Bottom Finial to the Lamp Body and secure by turning in a clockwise direction as step 2. (See illustration)
- Fasten the Crossbar (C) onto the Outlet Box by using the Outlet Box Screws (F).
- Insert the shorter end of the Pre-Threaded Pipe (E) into the pre-drilled hole in the Crossbar (C) and secure with the Hex Nuts (D). (See illustration)
- Attach the Collar Loop (H) to the exposed end of the Pre-Threaded Pipe (E) and secure by turning in a clockwise direction.
- Attach one Quick Link (I) on one end of the Chain (J) to the Loop on the top of the Top Cover.
- Attach the Canopy (G) over the other end of the Chain (J). Then attach the other Quick Link (I) on the other end of the Chain to the Collar Loop (H).
- Place the wire through every other link of the Chain, through the Collar Loop and up through the Pre-Threaded Pipe (E). (See illustration)
Adjust cord length as needed for your installation, remove excess.
- Install both ground wires in the Crossbar (C) with the Green Ground Screw (B) supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (G) over the outlet box and secure with Pre-Threaded Ring (H).
- Place the 8 Shades on the Socket and secure by the Socket Ring. (See Illustration)
- Install 60 Watt, Type B bulbs (NOT INCLUDED) into the sockets of the fixture.