








# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Illustration

STYLE NO. : R21355

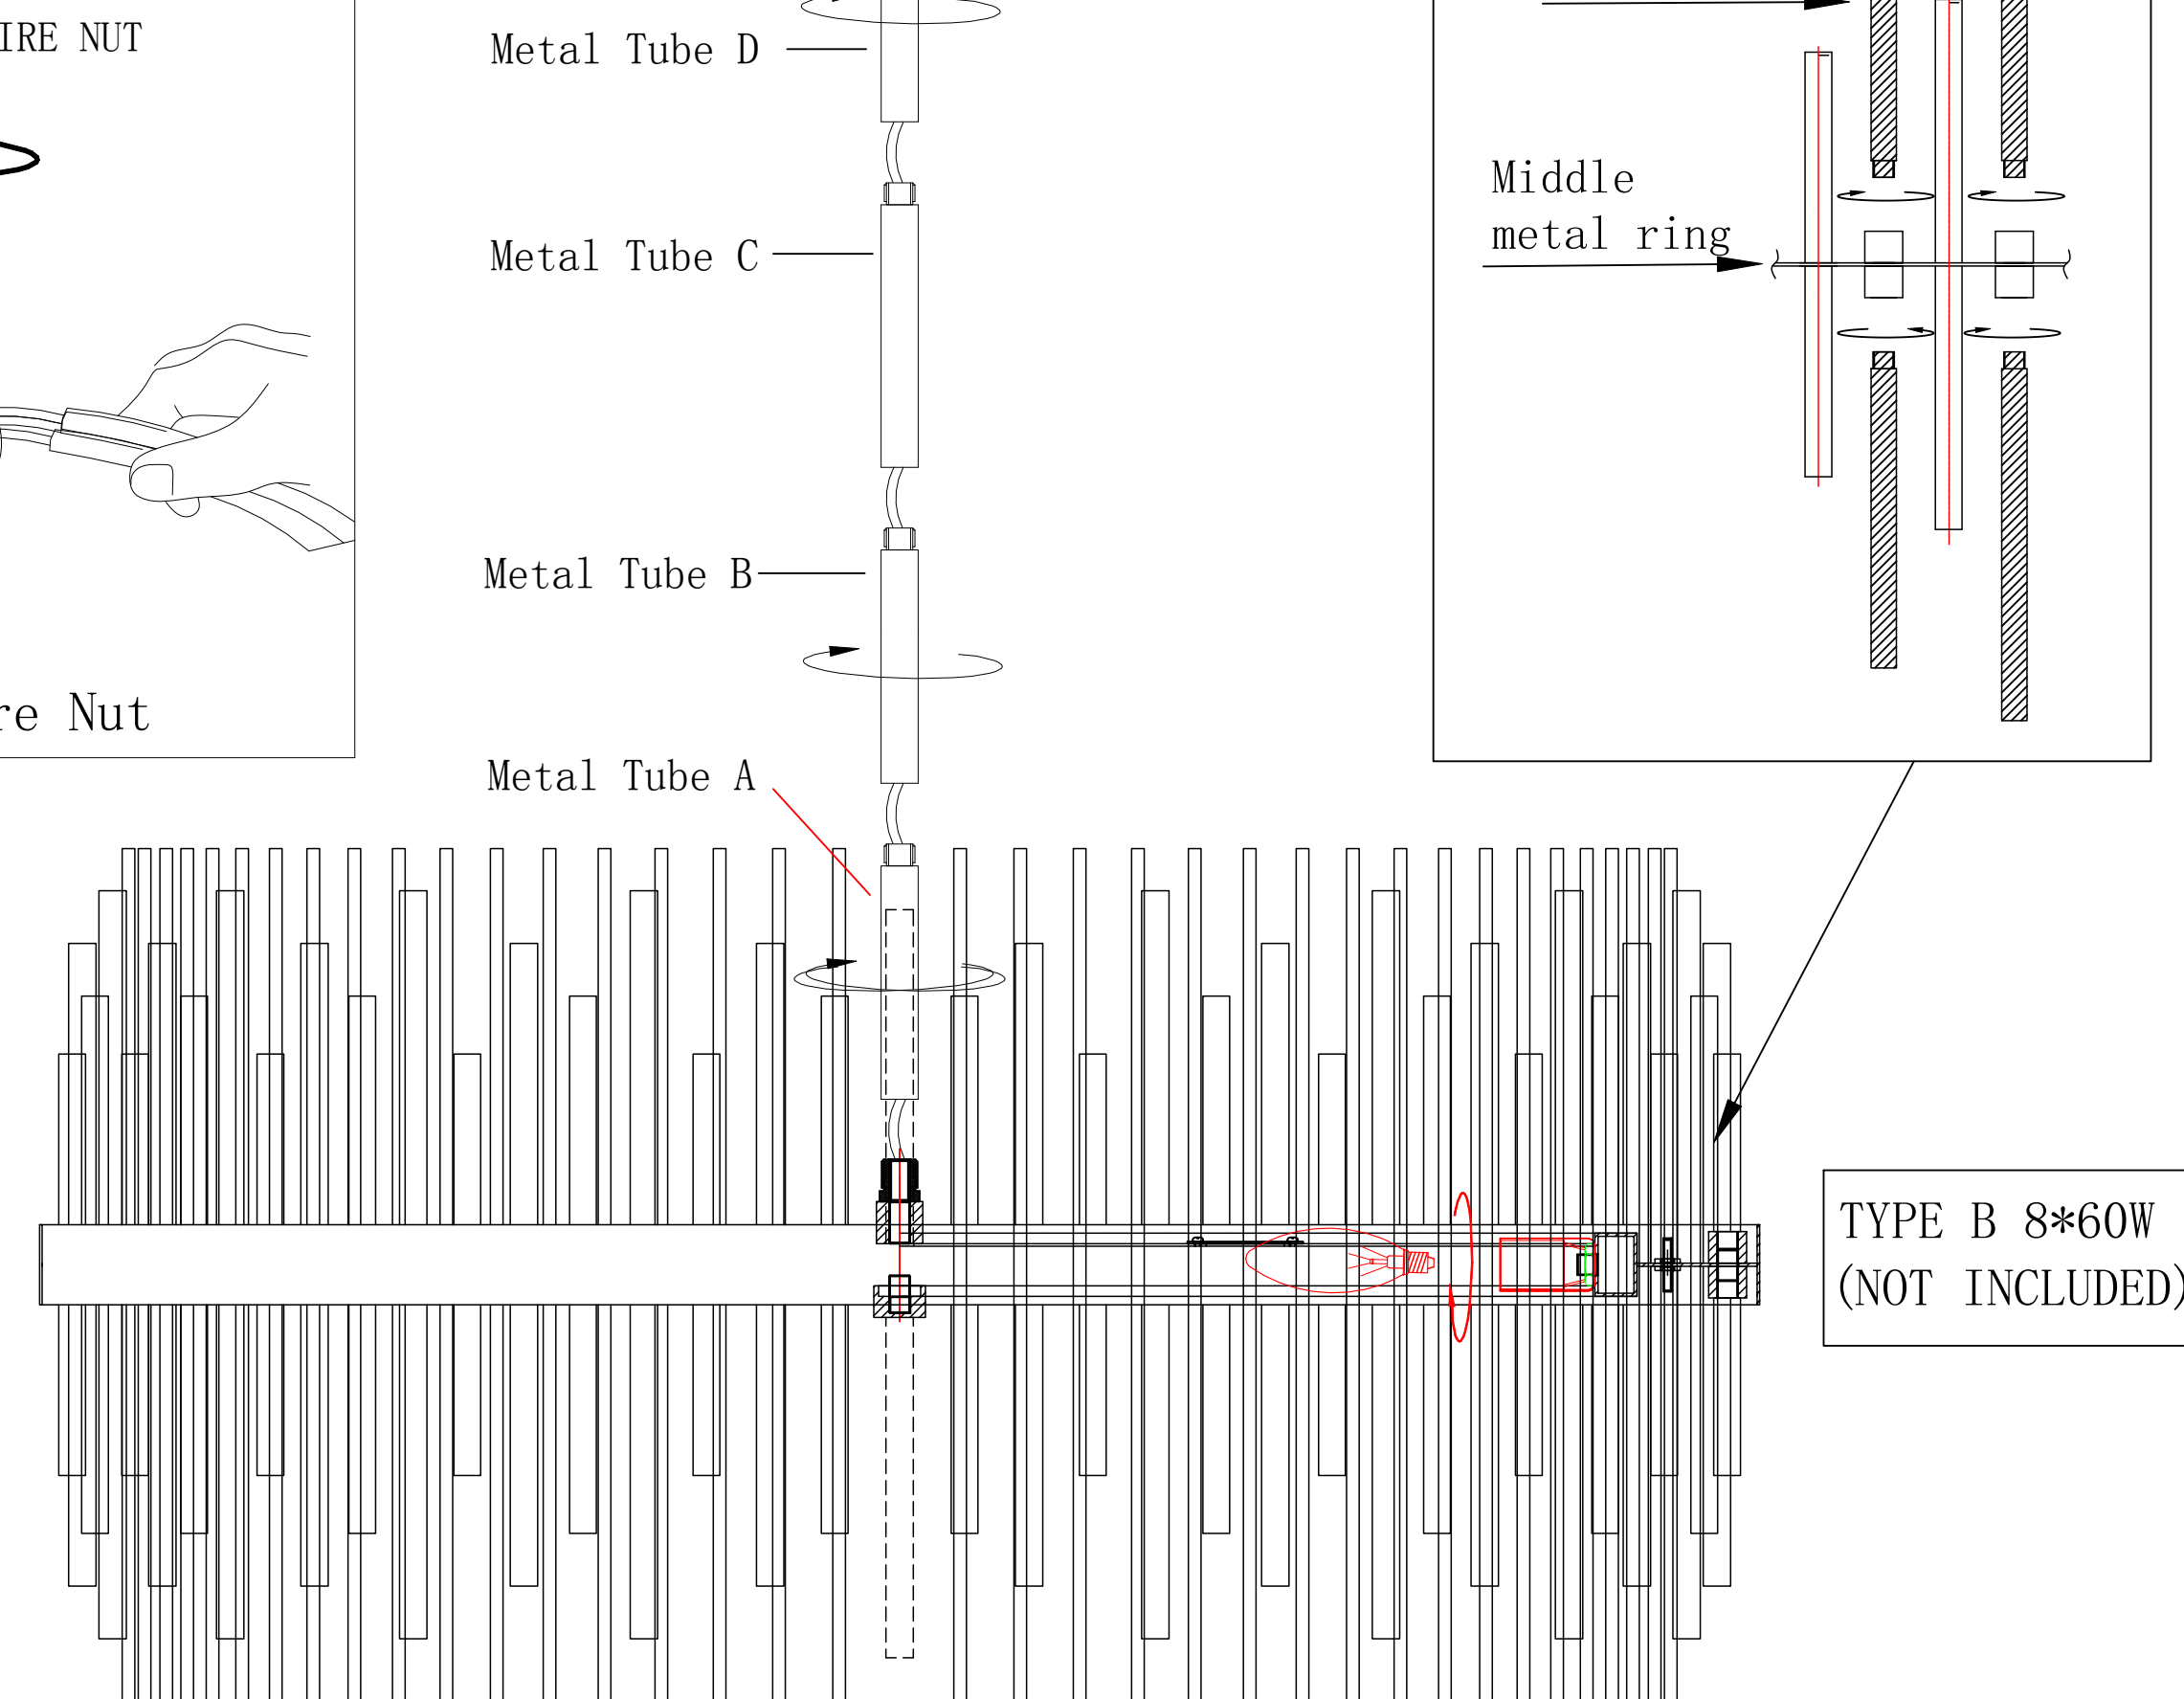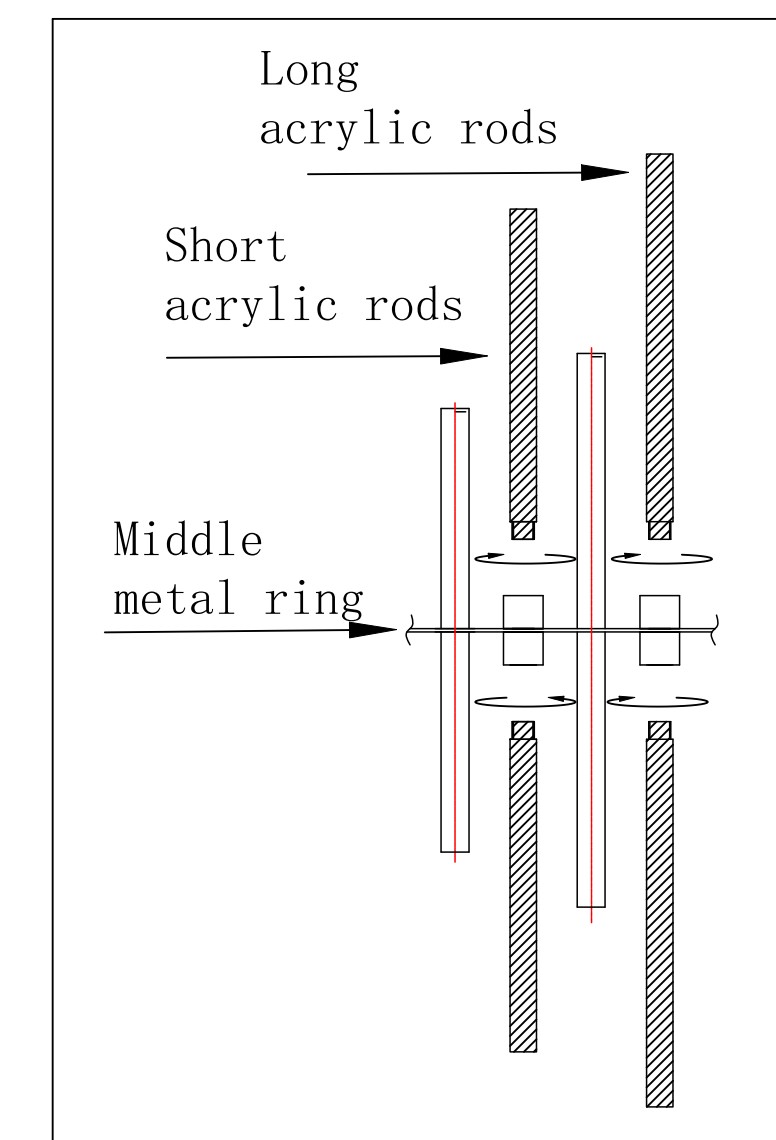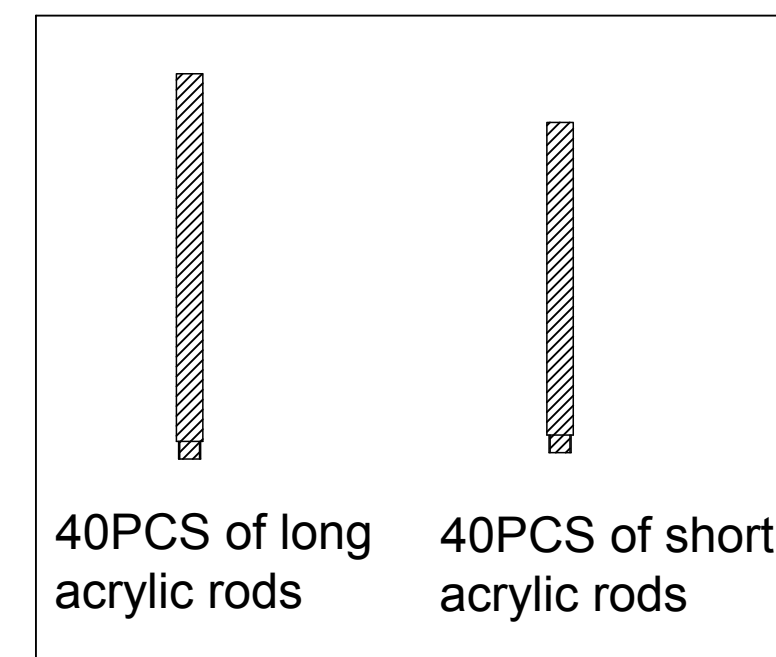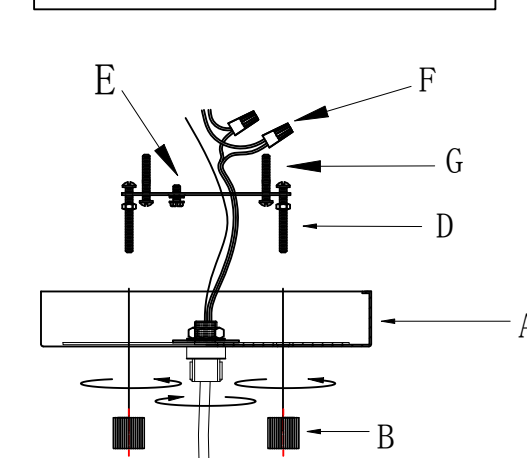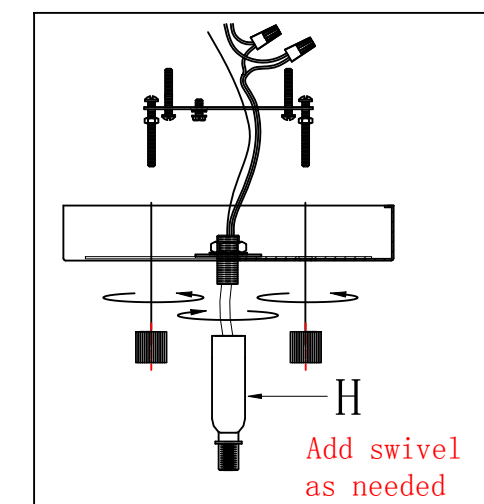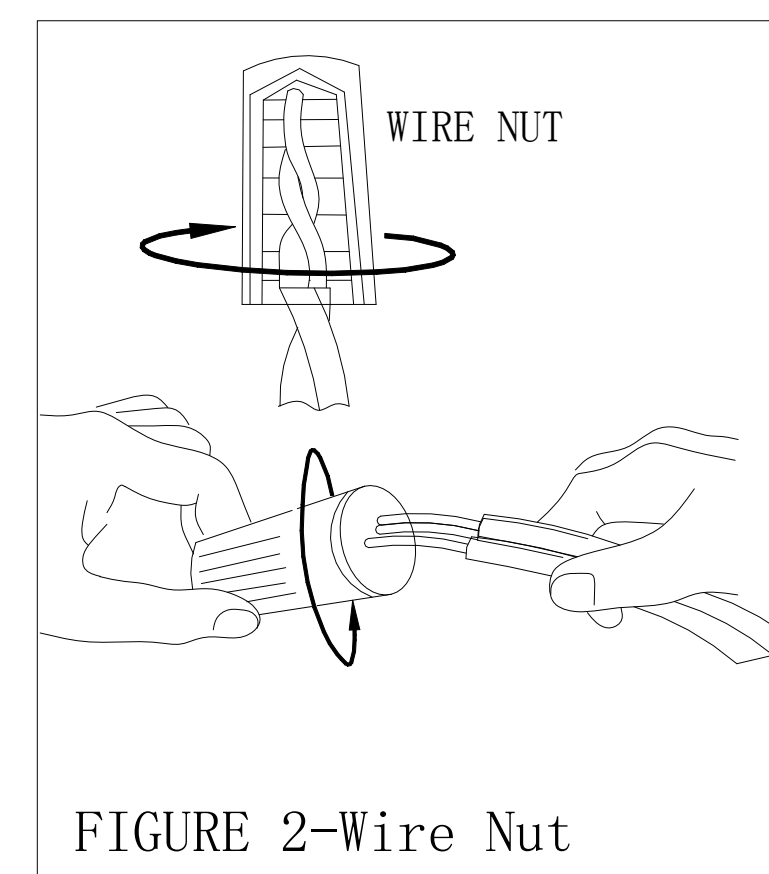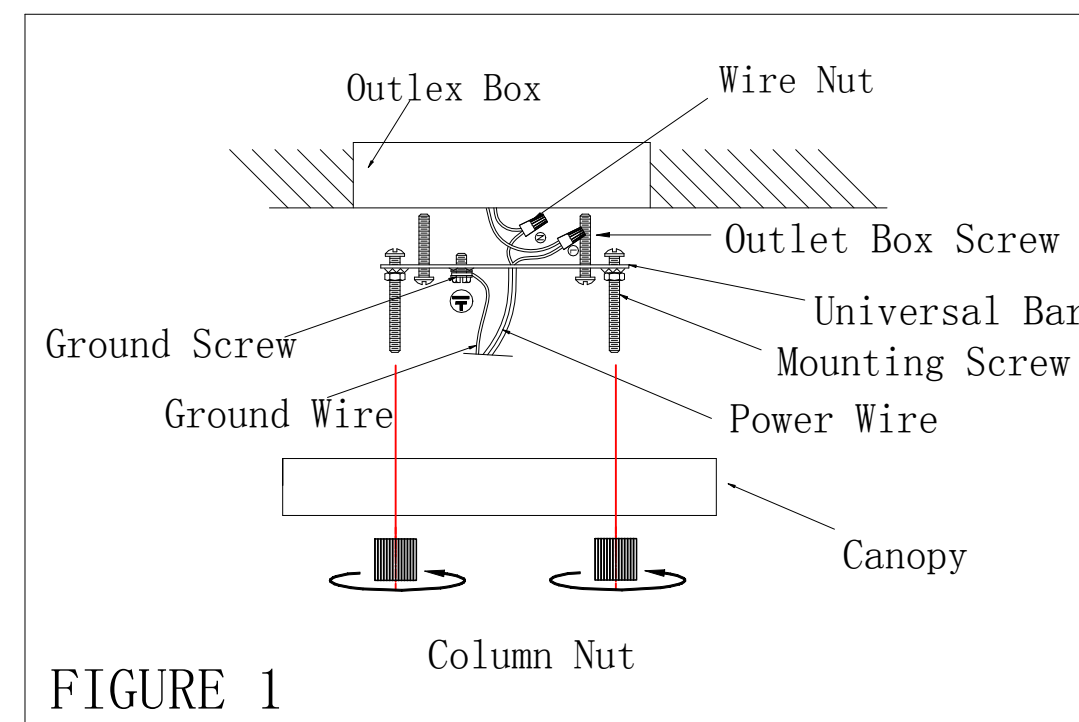

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151  
www.uttermost.com/Revelation

# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS

STYLE NO. :R21355

### Parts and Hardware List

A.	Canopy	1PC
B.	Column Nut	2PCS
C.	Universal Bar	1PC
D.	Mounting Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS
G.	Outlet Box Screw	2PCS
H.	Swivel	1PC

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

**WARNING: BEFORE INSTALLING,** make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

### Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Remove the Ball Nuts(B) under the Canopy(A) from the Mounting Screws(D), and take out the Universal Bar(C). Attach the Universal Bar(C) to the Outlet Box by using two Outlet Box Screws(G). (See Figure1)
3. Screw swivel (H) on the Canopy as needed, and another end of swivel to screw on one end of the metal tube D. If you don't need swivel, you can screw the metal tube D on canopy directly.
4. Adjust the length of the wire needed for your installation, remove excess, determine the number of Rods to be assembled to the Fixture Body as needed for your hanging height, then screw the Lamp body onto the Metal Tube A until tight.
5. Repeat the Step 4 with the Metal Tube B, C and D as needed for your installation height.
6. Install the ground wire in the Universal Bar(C) with the supplied Green Ground Screw(E).
7. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
8. After the wires are connected, tuck them carefully inside the Outlet Box. attach the Canopy(A) to the Mounting Screws(D) and secure with two Ball Nuts(B). (See Figure1)
9. Carefully screw the acrylic rods onto the middle metal ring until tight, following acrylic rods size guide in drawing.
10. Install the 8\*60 Watt max, Type B bulbs into the lamp holder of the fixture.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151  
www.uttermost.com/Revelation