

# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS


**R21584**

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

*We suggest a licensed professional electrician for installation*

## Installation Steps

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Choose the suitable number of Metal Rods and install the Metal Rod A,B,C,D into the Coupling. Remove excess wire.  
Screw swivel (K) on the Canopy as needed, and another end of swivel to screw on one end of the metal tube D.  
If you don't need swivel, you can screw the metal tube D on canopy directly.
4. Slip Collar ring and Canopy over the Rod assembly.
5. Slip Universal bar assembly along wire and thread it into the Metal Rod D.
6. Rotate the Metal Rod into E.
7. Raise fixture up and attach Universal bar to the Outlet box using two Outlet box screws.
8. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws .(See Figure1)
9. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
10. Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire,smooth wire evenly against the smooth wire from the Outlet Box,(Connecting the Wire---See Figure 2)  
Carefully tuck wires back into the Outlet Box.

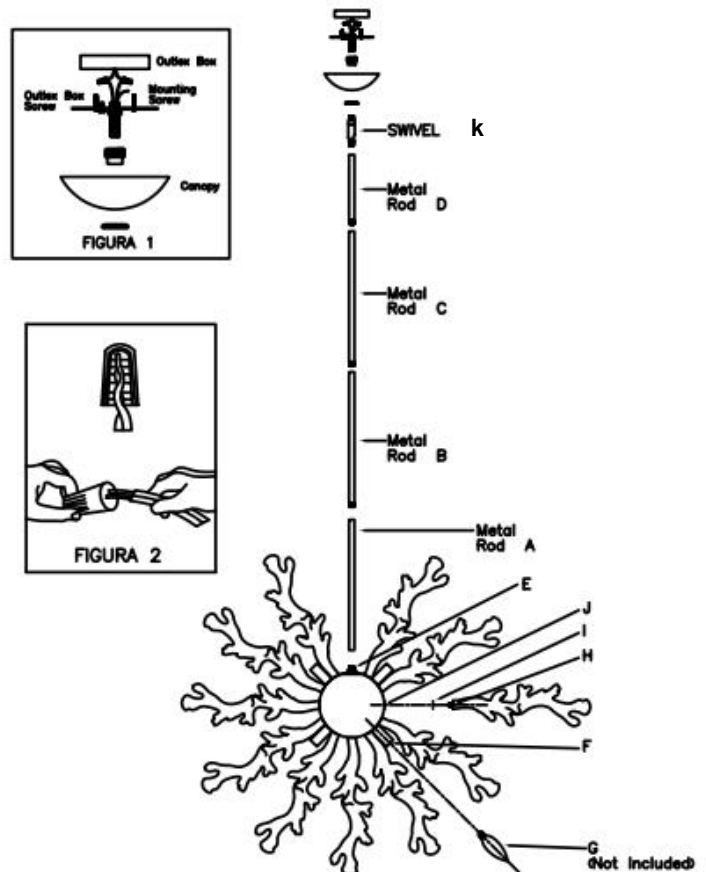

11. Slip Canopy up along rods and over the Universal bar and hold it in position. Slip Collar ring up to Canopy and thread it onto the Screw collar, to secure Canopy.
12. Install the White Coral part (H) through the Plastic Washer(I) into the hole of Cluster (J).
13. Install 8\*60W E12 bulbs G(Not Supplied),in accordance with the fixture's specifications.

**DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

**Swivel is included in hardware pack so you can use it if needed only.**