Pablo[®]

TUBETOP PENDANT

120V ASSEMBLY & INSTALLATION INSTRUCTIONS

INFO@PABLODESIGNS.COM 888 MARIN STREET SAN FRANCISCO, CA 94124

PABLODESIGNS.COM



120V ASSEMBLY INSTRUCTIONS

Pablo[®]

TUBE TOP PENDANT

- 1. CUT CORD TO DESIRED LENGTH
- 2. LOOSEN STRAIN RELIEF CAP AND FEED CORD THROUGH
- 3. TIGHTEN STRAIN RELIEF AND ATTACH MOUNTING PLATE TO JUNCTION BOX
- 4. CONNECT TO BUILDING WIRING
- 5. SLIDE COVER UP TO CEILING

BULB TYPE

TTP 7: 1X 57W BT - 15/120V HALOGEN




10FT (305CM)




CARE INSTRUCTIONS


WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

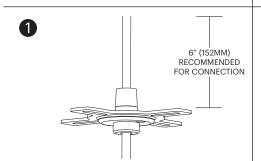

NOTE: BEFORE CUTTING, WRAP CORD WITH ELECTRICAL TAPE TO PREVENT THE FABRIC SLEEVE FROM FRAYING

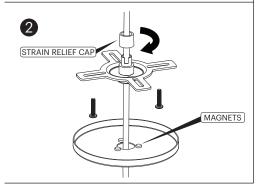

IMPORTANT: WE RECOMMEND CEILING MOUNTING BE INSTALLED BY AN ELECTRICIAN

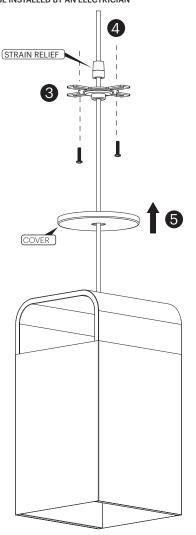

Pablo[®]

- 1. LAYOUT MOUNTING LOCATIONS FOR CABLE SUSPENSION KIT
- 2. INSTALL CABLE SUSPENSION KIT
- 3. HANG LAMP BODY BY INSERTING CABLES INTO CABLE LOCKS. DEPRESS NIPPLE ON CABLE LOCK TO ADJUST TO DESIRED HEIGHT
- 4. ATTACH MOUNTING PLATE TO JUNCTION BOX
- 5. FEED CORD THROUGH COVER AND MOUNTING PLATE; CUT THE CORD PROVIDING 1" (25.5MM) TO 2" (50.8MM) SWAG
- 6. CONNECT TO BUILDING WIRING
- 7. SLIDE COVER UP TO CEILING
- 8. TRIM EXCESS CABLE WITH WIRE CUTTERS

BULB TYPE

TTP 14: 2X 57W BT - 15/120V HALOGEN TTP 18: 2X 57W BT - 15/120V HALOGEN TTP 36: 4X 95W BT - 15/120V HALOGEN





CORD LENGTH

10FT (305CM)

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

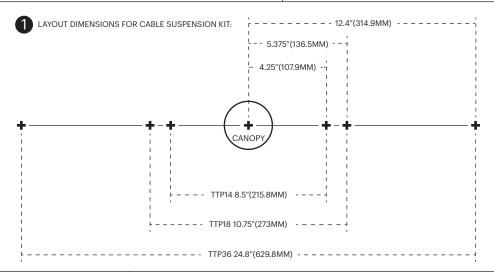

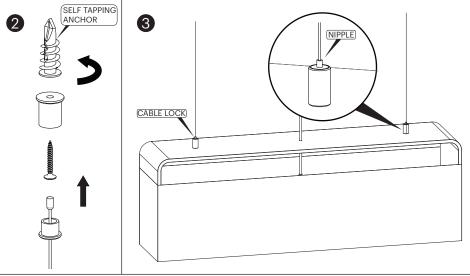

Pablo[®]

TUBE TOP PENDANT

- 1. LAYOUT MOUNTING LOCATIONS FOR CABLE SUSPENSION KIT
- 2. INSTALL CABLE SUSPENSION KIT
- 3. HANG LAMP BODY BY INSERTING CABLES INTO CABLE LOCKS.
 DEPRESS NIPPLE ON CABLE LOCK TO ADJUST TO DESIRED HEIGHT
- 4. ATTACH MOUNTING PLATE TO JUNCTION BOX
- 5. FEED CORD THROUGH COVER AND MOUNTING PLATE; CUT THE CORD PROVIDING 1" (25.5MM) TO 2" (50.8MM) SWAG
- 6. CONNECT TO BUILDING WIRING
- 7. SLIDE COVER UP TO CEILING
- 8. TRIM EXCESS CABLE WITH WIRE CUTTERS

BULB TYPE

TTP 14: 2X 57W BT - 15/120V HALOGEN TTP 18: 2X 57W BT - 15/120V HALOGEN TTP 36: 4X 95W BT - 15/120V HALOGEN



LENGTH OF CORD SUPPLIED 10FT (305CM)

CARE INSTRUCTIONS

WIPE CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA-BASED CLEANERS.

